

Pager and Charger Guide

Part Number 321032A5




# Premises Pager System<sup>®</sup>

**CommPass<sup>®</sup> Pagers**

GuestPass<sup>™</sup> Pagers

MediPass<sup>™</sup> Pagers

ShopperPass<sup>™</sup> Pagers

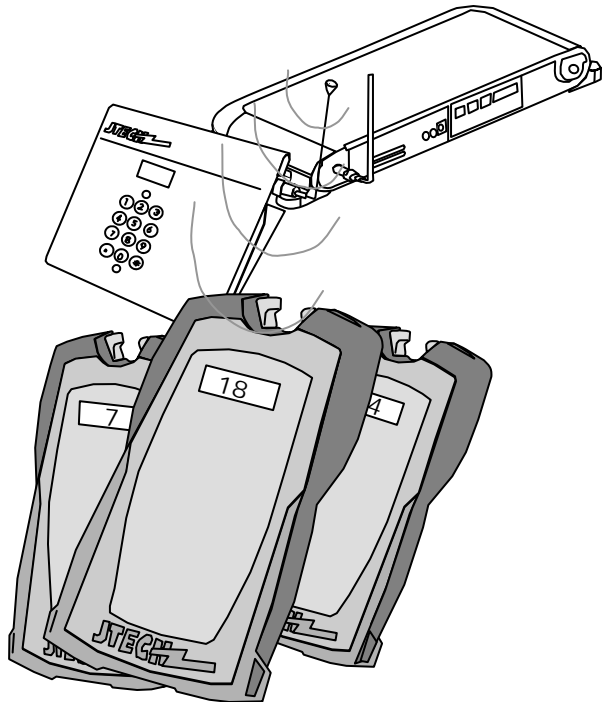


**Introduction:**



Congratulations on your purchase of the JTECH Paging System. Please take a few minutes to review this manual prior to installing and operating your system.

Please inspect the System upon receipt. If the contents appear to be damaged, notify the shipper immediately to file a claim and notify JTECH Customer Care. If components are missing, contact JTECH Customer Care.

If you have any questions or need assistance, please call JTECH Customer Care at 800-321-6221 or 561-997-0772, option 6.

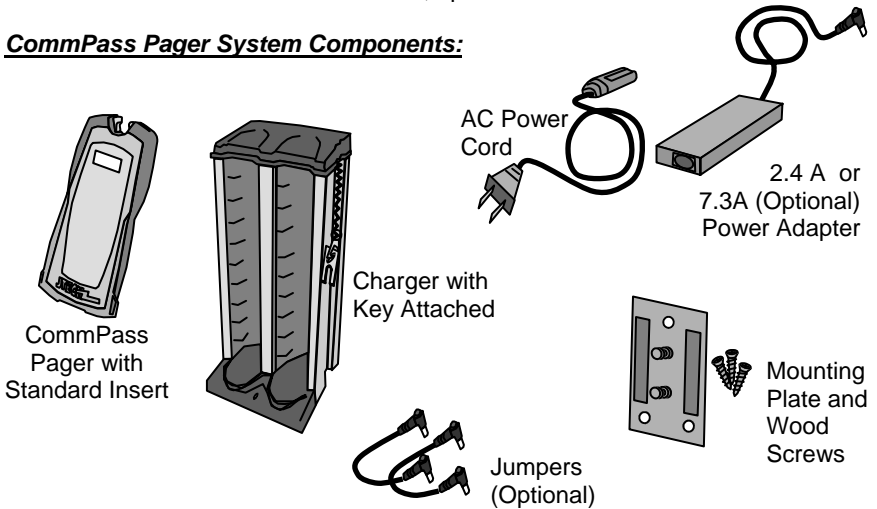
**CommPass Pager System Components:****Multiple Chargers:**

- A single *Charger* can hold up to 20 *Pagers*.
- Combine two or three *Chargers* using the optional *Jumpers* and 7.3A *Power Adapter*.

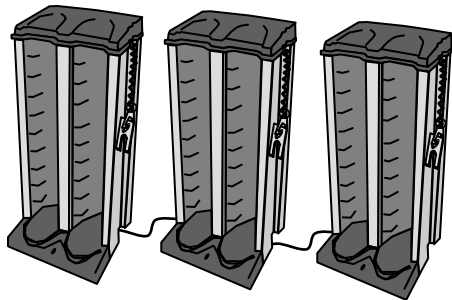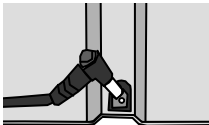


**Mount Chargers:**

- *Chargers* can be wall or counter top mounted using the supplied *Mounting Plate*.
- *Wood screws* are include for table or shelf mounting.
- If mounted to a shelf or table, the four rubber feet on the bottom of the *Charger* must be removed.
- Wall anchor hardware is user supplied.

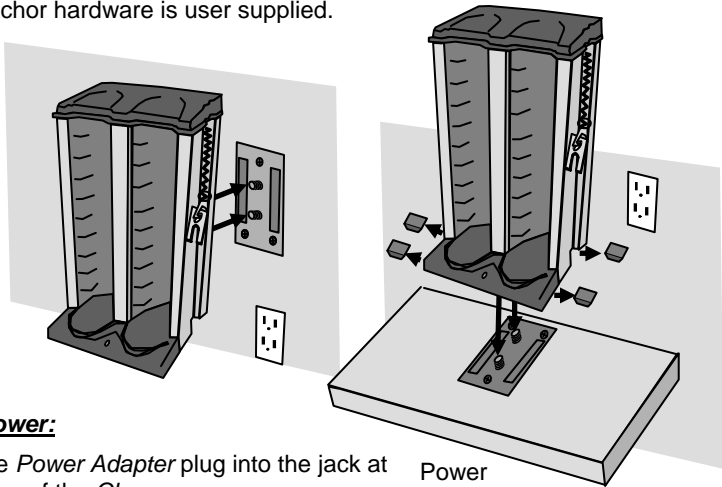
**Connect Power:**

1. Insert the *Power Adapter* plug into the jack at the bottom of the *Charger*.
2. Connect the *Power Adapter* to the *Power Cord*.
3. Plug the *Power Cord* into a 120VAC outlet.
4. The green LED on the *Charger* will light (ON).
5. Once the *Charger* is ON, the *Pagers* can be inserted.

Power  
Adapter  
Plug

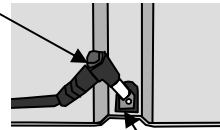


Charger  
Jack

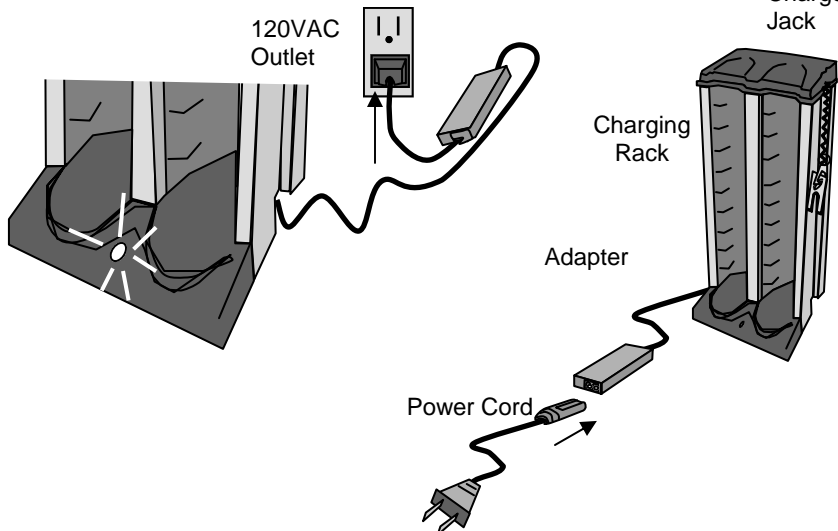


**Charge Pagers:**


- *Pagers* are turned OFF for shipment from JTECH.
- When first received, *Pagers* are to be charged for a minimum of 3 hours prior to use.
- This first charge will also turn ON the *Pagers*.
- To charge:
  1. Insert *Pagers* into the empty *Charger* locations.
  2. Once in the powered (ON) *Charger*, each *Pager's* LED will light:
  3. The LED color indicates charging condition.
    - Flashing yellow light = Battery charge very low. Charge needed. Do not use the *Pager*.
    - Solid yellow light = Charge Needed.
    - Solid green light = OK to use.

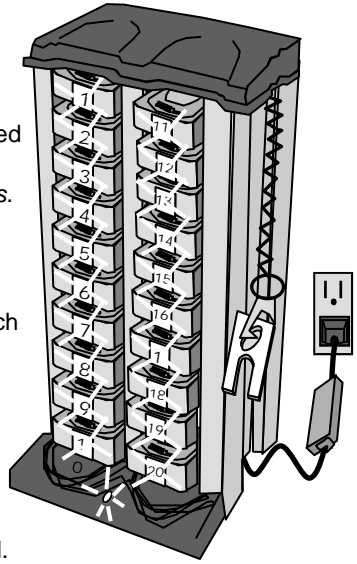

- The charging system is two stage, with a fast initial charge and then a final maintenance charge.
- *Pagers* in use and returned to the *Charger* within 24 hours will fully charge within three hours.
- If not returned within 24 hours, charging time of up to eight hours may be required to fully charge batteries.

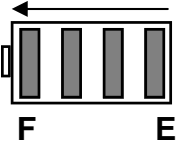
**Store Pagers:**

- Store *Pagers* in the *Charger* when not in use.
- To maintain maximum battery capacity, store *Pagers* in the powered (ON) *Charger*.
- If not charged in 3-6 months, *Pager* batteries may become damaged beyond repair and will need to be replaced.

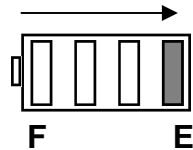


**Paging Using a Desktop Transmitter:**

1. Remove the *Pager* you wish to page from the *Charger*.
  2. The *Pager* will flash and vibrate to confirm it is ready for use.
  3. The *Pager* charge LED will continue to flash to confirm the *Pager* is ready to receive a page.
  4. Enter the number of the *Pager* on the *Transmitter* or *Remote Keypad*.
  5. Press # to send the page.
  6. The XMIT light on the *Transmitter* will turn ON, confirming the page is being sent. If using a *Remote Keypad*, the *Keypad XMIT* light does not ON.
  7. The *Pager* will vibrate, flash, tone or speak as required.
- See "Enter Pager #" Menu Functions in your *Transmitter* manual for more information.

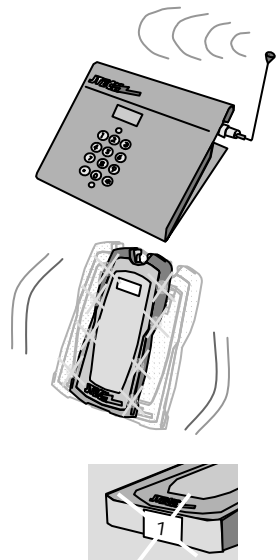


**Paging Using a 8205 & 8214 SmartAlert with RS232 and Telephone Transmitter:**

- See paging instructions in your *Transmitter* manual for more information.

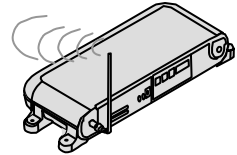



**Replace Inserts:**

1. Insert the *KEY* into the slots on the end of the *Pager*, until the *Clear Plastic Cover* unlocks.
2. Remove the *Clear Plastic Cover* and *Insert*.
3. Replace the *Insert* and "snap" the *Clear Plastic Cover* back into place.

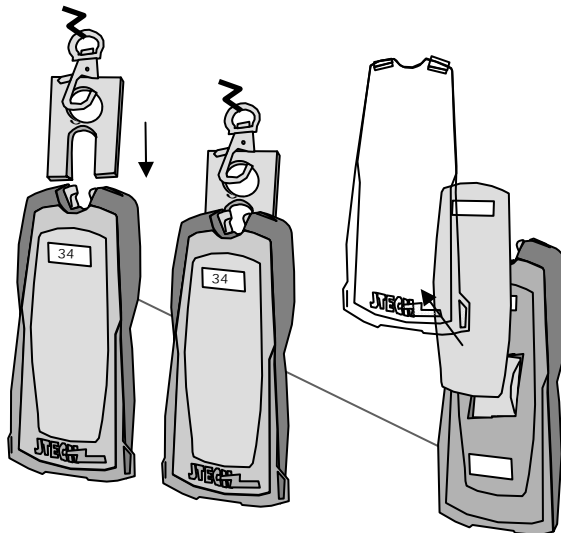


**Blank Inserts:**

- *Blank Promotional Sheets* are eight *Inserts* per sheet and perforated for removal.
- *Blank Promotional Sheets* are white in color and can be printed on using a standard printer.
- *Blank Promotional Sheets* can be ordered from JTECH as needed.
- *Inserts* can also be professionally printed (call your JTECH sales representative for more details).

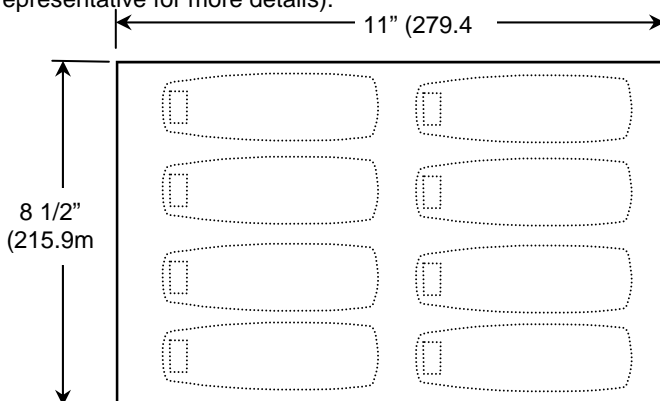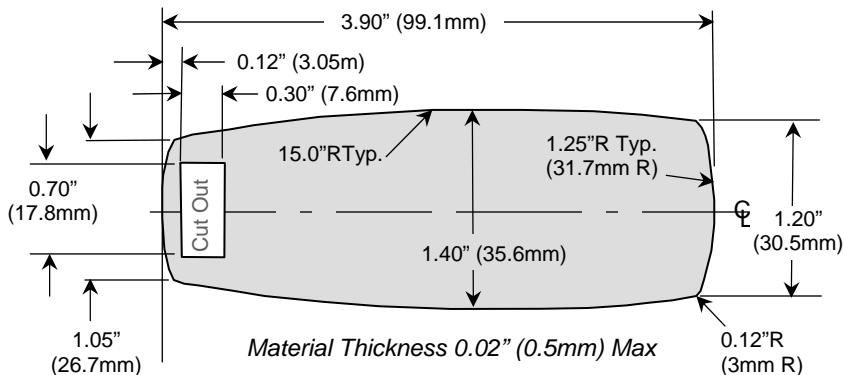**Insert Dimensions:****Replace the Battery:**

- Batteries that no longer charge properly or have a reduced operating time can be replaced by the user.
- Replacement battery packs can be ordered from JTECH.
- To replace:
  1. Insert the *Key* into the slots on the end of the *Pager* until the *Clear Plastic Cover* unlocks.
  2. Remove the *Clear Plastic Cover* and *Insert*.
  3. Insert the *Key* into the space on the left side of the battery compartment and carefully pry the battery out.

4. Unplug the battery from the *Pager*.
5. Dispose of the Nickel Metal Hydride battery pack at any retail department or home improvement stores that recycles rechargeable batteries.
6. Plug the new battery pack into the *Pager*.
7. Move any excess wire to the into the compartment's left side while inserting the battery into the *Pager*.
8. Battery wires must be on the left side of the Pager and not under the battery to assemble the pager properly.
9. Replace the *Insert* and "snap" the *Clear Plastic Cover* back into place.
10. Insert the *Pager* into the *Charger* and fully charge the battery.

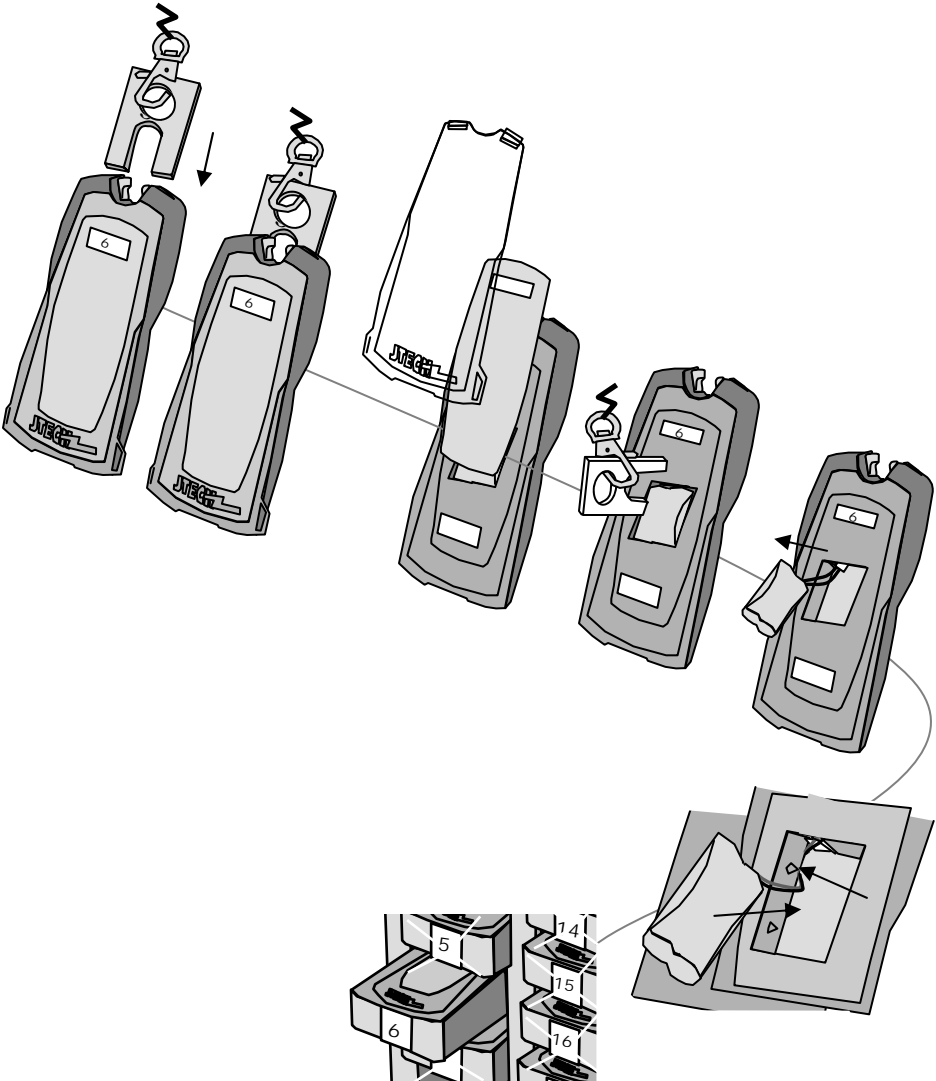

## **SYSTEM WARRANTY**

JTECH Communications, Inc. warrants its equipment to be free from defects in materials and workmanship for a period of one year. Its obligation under this warranty is limited to repairing or replacing, at its own sole option, any such defective products. Products must be returned with transportation charges prepaid and must be accompanied by a brief description of the problem encountered and date and place of purchase. This warranty does not apply to equipment which has been damaged by accident, negligence or misapplication or has been altered or modified in any way. This warranty applies only to the original purchaser who must have properly registered the product within ten days of purchase.

The following are not covered under our one-year warranty: adapters, antennas, user-replaceable batteries, pager belt clips, pager promobacks, pager battery doors, pager neck chains, liquid damage to master transmitter, pagers or chargers, lightning strikes or other acts of God that could affect the performance of the master transmitter, pagers and peripherals.



6413 Congress Avenue  
Suite 150  
Boca Raton, Florida 33487  
800-321-6221

Part Number 321032A5

© 2008, JTECH Communications, Inc. All Rights Reserved.